


Grin Technologies
205-950 Powell Street
Vancouver, BC V6A 1H9



info@ebikes.ca
www.ebikes.ca

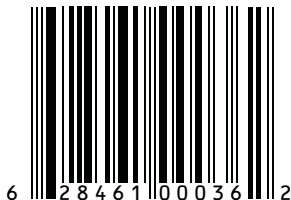

Part #: **STATORADE**

Statorade
10mL

Directions

To use:

Insert approximately 5mL of fluid into the motor, either by removing the side cover plate and squirting it into the air gap, or by drilling a small insertion hole in the side plate, being careful not to allow metal chips in the hub.

If the side cover plate is removed, it is important to re-seal it thoroughly with silicone prior to reassembly. Statorade can wick through thin gaps if the plate is not sealed.

**Air-Gap
Bridging
Ferrofluid**

**Keep Your
Motor Stator
Cool**

For more information, visit www.ebikes.ca



Advancing the world
of ebike parts and
accessories

www.ebikes.ca

